



Card #5: Use Yellow Paper  
Card #5: 使用黃色紙張

**Cordless Scanner** **Memory Mode**

**Enable Memory Mode**

↓

**Disable Memory Mode\***

↓

**Send Data** **1**

↓

**Clear Data & Confirm** **2**

↓

P/N S1XXXCCS11006 **1a**

**Cordless Scanner** **Bluetooth® Authentication**

**Enable Authentication** **1**

Use Preset PIN <0000> \*

↓

**Disable Authentication\***

Use Random PIN

↓

**PIN Code Input** **2**

Preset PIN: Before pairing, scan barcodes at back.  
Random PIN: While pairing, scan barcodes at back to input the same code displayed on the target device.

P/N S1XXXCCS21005 **2a**

**Cordless Scanner** **HID Interface**

**Reset BT HID connection**

↓

**BT HID\*** **1**

PCAT(US)\*

↓

**CipherLab dongle: USB HID\*** **1**

PCAT(US)\*

↓

**USB cable: HID** **1**

Memory Mode, 1661/1662/1664 only  
PCAT(US)\*

↓

**Select keyboard type** **2**

Scan barcodes at back.

P/N S1XXXCCS31004 **3a**

**Cordless Scanner** **Virtual COM Interface**

**BT SPP, Slave**

↓

**BT SPP, Master**

↓

**CipherLab Dongle: USB VCOM**

↓

**USB cable: VCOM\***

Memory Mode, 1661/1662/1664 only

P/N S1XXXCCS41003 **4a**

**Cordless Scanner** **Initial Setup for Mobile Phone**

**iPhone, iPad** **HID**

Random PIN: While pairing, scan barcodes at back.  
HID: Transmit by Character  
Enable keypad on mobile

↓

**BlackBerry, Android, Windows Mobile** **SPP**

Preset PIN <0000>  
SPP Slave Mode

↓

**Windows Mobile** **Preset PIN, HID**

Preset PIN <0000>  
HID: Transmit by Batch

↓

**Windows Mobile** **Random PIN, HID**

Random PIN: While pairing, scan barcodes at back.  
HID: Transmit by Batch

P/N S1XXXCCS51002 **5a**

**Cordless Scanner** **Memory Mode**

**\*This Page is Blank\***

P/N S1XXXCCS11006 **1b**

**Cordless Scanner** **PIN Code Input**

Start

↓

0

↓

1

↓

2

↓

3

↓

4

↓

5

↓

6

↓

7

↓

8

↓

9

↓

End

P/N S1XXXCCS21005 **2b**

**Cordless Scanner** **Keyboard Type**

64: PCAT (US)                      69: PCAT (Norwegian)  
65: PCAT (French)                70: PCAT (UK)  
66: PCAT (German)               71: PCAT (Belgium)  
67: PCAT (Italy)                 72: PCAT (Spanish)  
68: PCAT (Swedish)              73: PCAT (Portuguese)  
74: PSS A01-2 (Japanese)  
75: PCAT (Turkish)  
76: PCAT (Hungarian)

↓

0

↓

1

↓

2

↓

3

↓

4

↓

5

↓

6

↓

7

↓

8

↓

9

↓

End

P/N S1XXXCCS31004 **3b**

**Cordless Scanner** **Restore Defaults**

**Restore System Defaults**

↓

**Restore User Defaults**

↓

**Save as User Defaults**

↓

P/N S1XXXCCS41003 **4b**

**Cordless Scanner** **PIN Code Input**

Start

↓

0

↓

1

↓

2

↓

3

↓

4

↓

5

↓

6

↓

7

↓

8

↓

9

↓

End

P/N S1XXXCCS51002 **5b**

**Cordless Scanner** **Hands-free Operation**

**Enable Auto-Sense**

Hands-free use with Bluetooth® Base, 1560/1564 only

**Disable Auto-Sense\***

1560/1564 only

**Enable High Sensitivity**

Auto-Sense Mode, 1560 only

**Disable High Sensitivity\***

1560 only

P/N S1XXXXCS61001 **6a**

**Cordless Scanner** **Bluetooth® Base Interface**

**Keyboard Wedge** **1**

Bluetooth® Base only  
PCAT (US)\*

**Select keyboard type** **2**

Scan barcodes at back.

**RS-232**

P/N S1XXXXCS71000 **7a**

**Cordless Scanner** **Hands-free Operation**

**Laser Mode\***

Handheld use

**Continuous Mode**

Hands-free use with Bluetooth® Base

**Presentation Mode**

Hands-free use with Bluetooth® Base, 1564 only

P/N S1XXXXCS61001 **6b**

**Cordless Scanner** **Keyboard Type**

64 : PCAT (US)	69 : PCAT (Norwegian)
65 : PCAT (French)	70 : PCAT (UK)
66 : PCAT (German)	71 : PCAT (Belgium)
67 : PCAT (Italy)	72 : PCAT (Spanish)
68 : PCAT (Swedish)	73 : PCAT (Portuguese)
	74 : PSSS A01-2 (Japanese)
	75 : PCAT (Turkish)
	77 : PCAT (Hungarian)

**0**

**1**

**2**

**3**

**4**

**5**

**6**

**7**

**8**

**9**

**End**

P/N S1XXXXCS71000 **7b**